

Autoboss Scanner Function List

Base Function List

NISSAN&INFINITI

Autoboss Scanner: V30

Version: V2.7

Date: 2009-01-12

NISSAN SYSTEM	PROTOCOL MODE	READ DTC	ERASE DTC	DATA STREAM	ACTIVE TEST	ECU NO	WORK SUPPORT
BCM(CAN)	CAN BUS	√	√	√	√	√	√
ALL MODE AWD/4WD(CAN)	CAN BUS	√	√	√			
AUTO DRIVE POS(CAN)	CAN BUS	√	√	√	√	√	
ATUO SLIDE DOOR(CAN)	CAN BUS	√	√	√	√	√	
EPS(CAN)	CAN BUS	√	√	√			√
INTELLIGENT KEY(CAN)	CAN BUS	√	√	√	√	√	○
IPDM E/R(CAN)	CAN BUS	√	√	√	√		
LDW(CAN)	CAN BUS	√	√	√	√	√	○
Meter(CAN)	CAN BUS	√	√	√			
METER A/C AMP(CAN)	CAN BUS	√	√	√	√		
MULTIAV(CAN)	CAN BUS	√	√	√		√	
ADAPTIVE LIGHT (CAN)	CAN BUS	√	√	√	√	√	√
AIR PRESSURE MONITOR(CAN)	CAN BUS	√	√	√	√	√	√
DIU(CAN)	CAN BUS	√	√	√		√	
e-4WD (CAN)	CAN BUS	√	√	√	√	√	
ENGINE(CAN)	CAN BUS	√	√	√	√		○
HICAS-4WS(CAN) (CAN)	CAN BUS	√	√	√	√	√	
HVAC(CAN)	CAN BUS	√	√	√		√	
ICC (CAN)	CAN BUS	√	√	√	○	√	○

Autoboss Scanner Function List

ABS(CAN)	CAN BUS	√	√	√	○		○
PRECRASH SEATBELT (CAN)	CAN BUS	√	√	√		√	
TRANSMISSION (CAN)	CAN BUS	√	√	√	○	√	○
ENGINE SYSTEM	KWP	√	√	√	√	√	√
ENGINE SYSTEM	KWP	√	√	√	√	√	√
A/T SYSTEM	KWP	√	√	√	√	√	√
ABS SYSTEM	KWP	√	√	√	√	√	
BCM SYSTEM	KWP	√	√	√	√	√	√
AIRBAG SYSTEM	KWP	√	√			√	
HCM	KWP	√	√	√		√	
EPS	KWP	√	√				
IPDM E/R	KWP	√	√				
HEAD LAMP LEVELIZER	KWP	√	√		√		√
INTELLIGENT KEY	KWP	√	√				
AUTO DRIVE POS	KWP	√	√				
ADAPTIVE LIGHT	KWP	√	√	√	√	√	√
SMART ENTRANCE	NISSAN	√	√	√	√	√	√
IVMS SYSTEM	NISSAN	√	√	√	√	√	
AIRBAG SYSTEM	NISSAN	√	√			√	
ACT D/SUS SYSTEM	NISSAN	√	√	√		√	
HICAS SYSTEM	NISSAN	√	√	√	√	√	
ABS SYSTEM	NISSAN	√	√	√		√	
ALL MODE 4WD SYSTEM	NISSAN	√	√	√	√	√	√
CVT SYSTEM	NISSAN	√	√	√	√	√	√
A/T SYSTEM	NISSAN	√	√	√			
ASCD SYSTEM	NISSAN	√	√	√			

Autoboss Scanner Function List

ENGINE SYSTEM	NISSAN	√	√	√	√	√	√
ENGINE SYSTEM	NISSAN	√	√	√	√	√	√

Notes

√: function is supported.

: Not applicable.

○: Not available at the moment.