
FDQC (Foday) Function list_V2.05

vehicle	system	Control unit version	Read fault code	Erase fault code	Actual values	System status	Actuation	
Fudi SUV	Fudi Little Superman(delphi491)	√	√	√	√	√	√	Anti-theft status
	Fudi Explorer(Delphi 4G64)	√	√	√	√	√	√	
	Fudi Overflight(Delphi491)	√	√	√	√	√	√	Anti-theft status
